

Kit Contents:

- 4 Tail Light Seals
- 2 Alcohol Wipes
- 1. Remove screw with Torx-15 screwdriver.

 Remove & disconnect tail light.
 To release the light from the housing give the socket a 1/4 turn.

3. Clean tail light & bumper of dirt & loose debris.


Tools Needed:

• Torx-15 Screwdriver



4. Clean tail light rim with alcohol wipe & allow to dry.

 Starting in the top center of the tail light, apply seal to black plastic so rounded edge hangs slightly over the red plastic lens. Trim the end as needed.

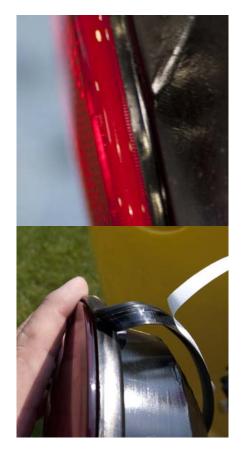

- 6. Lubricate the entire seal for installation.

 Dip your finger in car wash (soap) and lubricate the entire seal by rubbing the entire length.
- 7. Reinstall tail light & screw.

